

## CHAPTER 5. ADJUSTMENT (BD Unit)

### [1] ADJUSTMENT

#### 1. BD software version upgrade

##### 1.1. Get ready before you start

- USB Memory of 128MB or higher capacity. (USB 2.0)
- PC running on Windows 98/98SE/ME/2000/XP operating system.
- USB Memory reader/writer or PC with a USB port.
- The file system of a USB memory is FAT or FAT32.
- Use the USB memory without other functions. (lock and memory reader...etc)

##### 1.2. Preparations

To upgrade the main software, it is necessary to get ready the USB Memory for version upgrade before you start.

Follow the steps below and create the USB Memory for version upgrade.

1. Copy the file HPAP3X\_xxx. RVP for version upgrade to the root directory (folder) of the USB Memory.

NOTE: In the USB Memory drive, do not store other folders or unrelated files, or more than one file for version upgrade.

Now the USB Memory for version upgrade is ready.

##### 1.3. How to upgrade the software


1. I confirm that a disk is not in the disk drive.

When including Disc, a EJECT (▲) button is pressed and Disc is taken out from Disc Drive.


2. Insert the USB memory device with the update file into the BD STORAGE/SERVICE terminal on the Disc Drive of this TV.
3. Press MENU to display the MENU screen, and then press ◀/▶ to select "Option".
4. Press ▲/▼ to select "Blu-ray disc Setup" and then press ENTER.
5. Press ▲/▼ to select "Software Update" and then press ENTER.



6. Press ENTER to start checking data in the USB memory device.

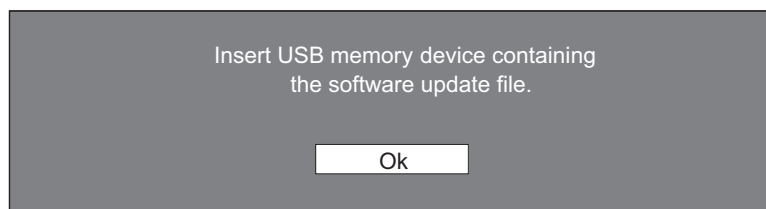

7. During the data checking, "Checking" blinks.

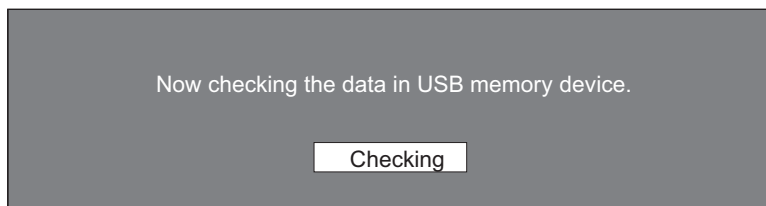



9. When the software is successfully updated, a screen is displayed indicating that the update process is completed.

- If the update has failed, check the file in the USB device and try Software Update again.

10. Press TV POWER to turn off the TV.

11. Remove the USB memory device.